SMART ACCESS

The smart wireless key remote is the ultimate solution for unlocking your smart lock with ease and convenience. With a range of up to 8 metres, you can unlock your smart lock from a distance, saving you time and hassle. This remote is designed to work seamlessly with our latest products in our SecEsafe smart lock range.


Create efficient unlock processes in personal and commercial settings without struggling to find your phone or keys to unlock your door and embrace the simplicity of our smart wireless key remote.

COMPATABILITY

IMPORTANT: PLEASE READ


Be sure to check that your smart lock is compatible with this new product.

- 1) You can do this by going into the smart lock on the TTLock App.
- 2) On the home page of the lock, check to see if the 'Wireless Key Fob' icon is available.
- 3) If so, this means that your lock is compatible with the smart remote. Unfortunately, older versions are not compatible with this new technology.

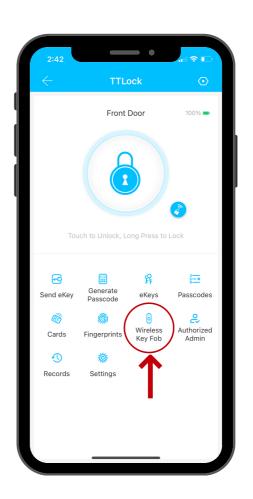

OPERATING THE SMART WIRELESS KEY REMOTE

OPERATION

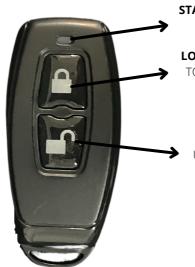

STATUS LIGHT: WILL FLICKER WHEN PROMPTED TO LOCK/UNLOCK

LOCKING: PRESS THE LOCKING KEY TO LOCK, THE STATUS LIGHT WILL FLICKER TO INDICATE ACTION

UNLOCKING: PRESS THE
UNLOCKING KEY TO UNLOCK, THE
STATUS LIGHT WILL FLICKER


LOW POWER: THE STATUS LIGHT WILL FLICKER SLOWER THAN NORMAL ON THE UNLOCK/LOCK ACTION TO INDICATE LOW POWER

*Be sure to insert CR2032 battery prior to conducting the following steps




STEP 1

Open "TTLock" and select the lock you wish to add the wireless smart remote to.

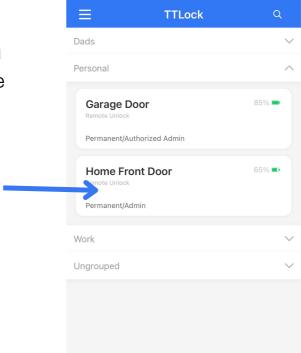


STEP 2

Select "Remote" on the lock homepage.

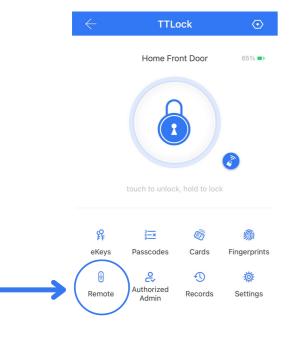

STEP 3

Then select
"Add Remote"
at the bottom
of the screen

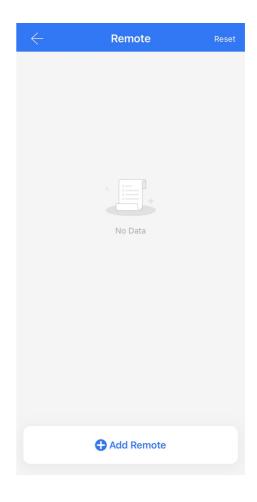

STEP 4

Select the desired remote type and then enter corresponding remote name.


Permanent: Permanent codes have no expiry or restrictions unless deleted.

Time: This option enables you to enter a starting date and concluding date. Wireless key will expire after the end time & date.

Recurring: Select from certain days, weekdays or weekends to enable the remote to only work certain days. Then select hours within selected days that the remote can work.

STEP 5

Follow the prompts illustrated on the screen and select "next".

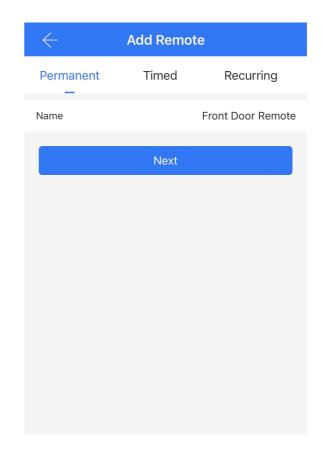



Long press the locking key for 5 seconds




Click next when the light flashes quickly

Next

STEP 6

If the pairing process is successful, the wireless remote will appear on the screen with it's auto-generated identifier name.


Select the "+" symbol to connect the wireless key remote to the smart lock.

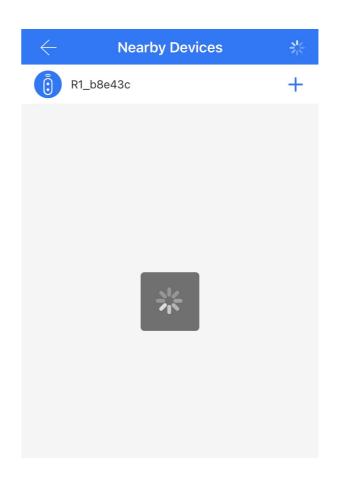

STEP 7


Once successful, the wireless key remote will appear on the "Remote" page.

Here you can manage multiple wireless key remotes and easily check the battery status of the remote.

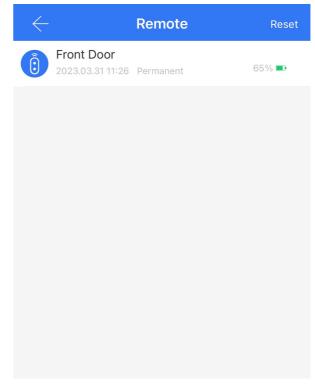

STEP 8

You can view records of when the wireless smart remote was used in "Records" on the smart locks home page and in the specific wireless key remote settings under "Records".

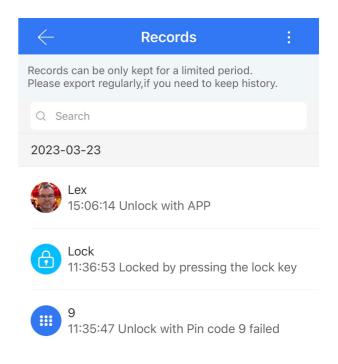


MANAGEMENT

By selecting the wireless key remote you can view the remote settings.

You can change the remote name, check records and view validity period.

Here you can view:

- Lock name & number
- Battery status
- Updates available
- View records

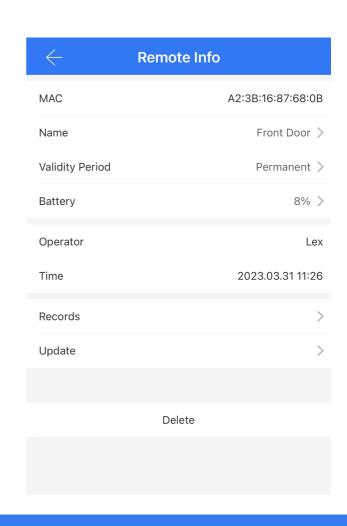

TIPS & TRICKS

The smart wireless key remote is a great addition to your smart lock set. This smart remote provides a convenient entry method. Whether it be to unlock your garage from the comfort of your car or unlock the front door of a reception whilst at your desk, this smart remote is a great addition for a variety of environments.



Please Note:

- The Same remote key can be configured/paired with multiple locks so you don't have to carry multiple keys for each lock.
- The remote works on Bluetooth range. As a result, a G2 or G3 gateway is not necessary to operate remote.
- Required battery, CR2032 is not included in purchase.